



尺寸:75x90mm 材质: 157g铜版纸正反印

544K00101210 VALUE锂电弯管器 反弯装配中英文说明书-A版-20230211


VALUE
VALUE Creates Value




Reverse Bend Top Block



Reverse Bend Retaining Block

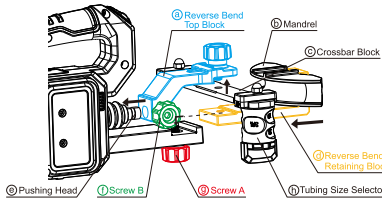

① Pushing Head ② Screw B ③ Reverse Bend Top Block ④ Mandrel ⑤ Crossbar Block ⑥ Reverse Bending Retaining Block ⑦ Tubing Size Selector ⑧ Screw A



Not sure how to install?
Scan to watch video instructions.

How to Install Reverse Bender


1. Lock ③ Reverse Bend Retaining Block using ⑧ Screw A onto tube bender, press appropriately sized ④ Mandrel into the ③ Reverse Bend Retaining Block, with angle marks side facing down.
2. Lock ⑤ Crossbar onto ③ Reverse Bend Top Block, then insert it into the ① Pushing Head and lock it with ② Screw B.
3. Slide ⑦ Tubing Size Selectors into the right position. Both ⑦ Tubing Size Selectors should have the proper-sized notches facing the ④ Mandrel. Place copper tube into the notches. Push the control button to start bending.

正面


VALUE 飞越
VALUE Creates Value 卓越品质 飞越无限




反弯顶块



反弯固定块

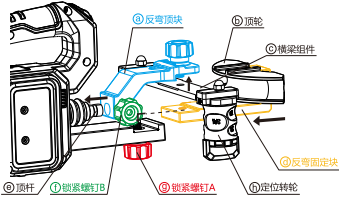

① 顶杆 ② 锁紧螺钉B ③ 反弯顶块 ④ 顶轮 ⑤ 横梁组件 ⑥ 反弯固定块 ⑦ 定位转轮 ⑧ 锁紧螺钉A



扫描二维码
查看详细组装视频

反向弯管组装说明

1. ⑥ 反弯固定块用弯管器上的 ⑧ 锁紧螺钉A锁紧, 将合适尺寸的 ④ 顶轮角度标记面朝下, 并压进 ⑥ 反弯固定块;
2. 将 ⑤ 横梁组件锁紧在 ③ 反弯顶块上, 再将 ③ 反弯顶块插入 ① 顶杆, 用 ② 锁紧螺钉B锁紧;
3. 将 ⑦ 定位转轮凹槽调整到合适尺寸, 将铜管放入 ④ 顶轮凹槽并贴紧启动机器折弯。

反面